## **Deck Walk (Daily Checks)**



Daily, on long passages, away from land, it is essential to do morning and evening deck "walk" to check that everything on the boat is well secured and in order. Look for things that are not quite right.

## Deck Walk (Daily Checks)

System	Look / Listen for
Hull	Inspect bilge for water
	Check that there is no water anywhere below the deck
	Check deck and brightwork for stains
	Check lockers in the cockpit and saloon are free of damp and not mouldy-smelling
Running	Visual check of running rigging for chafe especially around blocks and knots. To inspect the mast
rigging	higher up, lie flat on the foredeck and use pair of binoculars
	All shackles and other pins in place
	Blocks / sheaves are not squeaky, worn or cracked
	Check for frayed, damaged and wrapped lines
	The control line of jib furling is not twisted inside the drum
Standing	Stays are not loose (shrouds, forestay, backstay etc.) and don't have broken strands
rigging	Mast straight when standing at the foot of the mast and looking upwards
	No factures and fatigue around fittings, all angles equal on each side of spreaders
	Cotter and clevis pins are not bent or damaged
	No cracks on welds around the gooseneck or vang, all rivets holding boom mounts in place
Sails	Chafe or damage on any running sail
	Sail battens are not broken or loose
Steering	Autopilot is not squeaking / groaning
	Rudder bearings are not squeaking / groaning
	No other unusual steering noises
On-deck	Jackstays / lifelines are not loose, frayed, damaged, or stretched
safety	Guardrails, stanchions, pushpit, and bow pulpit are not loose
	Safety equipment is in place (horseshoe, lifering etc.)
	Anchor is firmly attached to the anchor chain, and not loose on board
Engine	Oil and Coolant levels are ok, no leakage of fuel, oil or coolant
	When in operation, water is coming out in regular bursts from the exhaust pipe
	Visual inspection of engine exterior. "Finger tight" check on engine mountings and coupling bolts
Plumbing	No sign of "rotten egg" odour in heads
	No water leaking to the toilet floor
	Water pumps are working and switching off when pressurized
	Sniff the bilge for LPG gas vapours
Radios	Test DSC without radiation of signals, e.g. internal loop test
Consumables	
	Voltage: 11.5V – fully discharged; 12.1V – 50%; 12.7V – fully charged; 13.2/4 – charging

© www.bluewatermiles.com